POWERSCOUT®

Transparency for your electrical distribution systems





POWERSCOUT®

Time = money and both are resources that are generally in short supply. Staff shortages, ever **stricter conditions and deadlines** and the constant need to optimise are the counterparts to this simple equation.

Responsible electrically skilled persons experience this more and more. They are specialists, but are perceived as all-rounders and are to a large extent responsible for the smooth functioning of operational processes. According to the motto "Just do this as well", **the actual tasks are increasingly being neglected**.

The **solution** is to **automate** routine and recurring mandatory tasks.

POWERSCOUT[®] helps you to achieve the following goals:

- Avoiding unwanted shutdowns
- Avoiding shutdowns as part of the periodic verification
- Fulfilling documentation obligation
- Visualising leakage and residual currents
- Minimising effort and costs
- Iso, RCMS and ATICS[®] report
- Automation of your reporting



Automated reports

Reports can be generated from the dashboards. A dashboard can always be sent and saved as a report. There is also an option for managing these reports. In the report management, the publishing intervals as well as the storage in POWERSCOUT[®] can be set.

- Automated report generation
- · Freely configurable time periods
- Storing 250 reports in a history
- Sending reports via e-mail
- Insulation report, residual current report (German Social Accident Insurance Regulation 3 (DGUV V3)) and ATICS[®] report

DER										×.
Beikhberwahm										
telperate Pass	la figeritar									
-	ineral							Approximation and an approximation		
Instantion (1912	Parallel	-	-		-		4.1	per literat (see an manue		Bar
phingpoi M	mate	-	8		-		ar. 1	and defaultion and restored a		2.0
irenakkoppowi	inter income	 -	1	. •	-		66.14	per bit of And And Stationers	.+	2.00
Teplative is bire	Read	-			-		88. T	portination do manor		8.00
interio										
Mon.				the				-		
TRACE AND				(Provide and a second		aing		4		Bute
and free spaces				1.4	-	4			to te ball	Tire
21220000				interes	-	ю.				Bare
and pressed				-					-	12.00

ENDER			12 18
(invest)			e
to the second			
Reliefs 12	50349 X	Same B	Anima M
00	88	02	05
Second D	Notes 6	Salacia C	Mass 4
00	88	02	88
Lands of	anta a	Select 1	
20	00	00	

Building and system overview

The installation/system can be displayed by means of freely configurable tiles. As soon as a warning or an alarm (residual current exceeded, insulation fault, upcoming test) occurs in one of the configured parts, it automatically appears on the screen.

- · Individual design of buildings, floors and rooms or entire plants
- Navigation to the fault source
- · Link to detailed view (dashboard) is possible
- Number of events of the last 28 days can be displayed
- · Events and incidents in the system can be counted
- · Identification of problematic system parts

Individual appearance

- Logo freely selectable
- Colour setting to match your corporate design (CD)
- Login page can be integrated in your homepage





Configurable dashboards

Dashboards can be used to visualise stored measured values and events. The contents can be structured using configurable widgets. Among other things, time periods and different statistical values can be set. The dashboard can be easily and individually configured using drag and drop.

Additional settings are available in the dashboard management, e.g. publishing for other users.

- Configurable dashboards
- Display of:
 - Charging current
 - Residual currents (DC/RMS)
 - Utilisation
- Comprehensive view by means of configurable widgets
- Sharing dashboards with other users
- Regular generation of PDF files + forwarding by e-mail
- Long-term archiving of the data

POWERSCOUT® features

User management

- Management of users
- Different user rights
- Restricted views

	Benutzerverwal	tung					
	Q maxmosleman	1					×
	10:11001					< Seite1von1 >	5
	Bendtoename	Vorname	Rachtsma	E Mail	Status	Rollen	
	🗉 maxmedemann	Har	Huptermain	max.mutermanisibender.de	Aldre	User, Aritmatuser	
	1 bis 1 wen 1				. *	(Selle1son1)	
Vertuelle Messparikte	Besutter NrzuAlges						


< Exportieren				
and the second				
Contract Optimizes			Zu suportionade Messpulikter	
All the second s			· Auguration Responses (d)	
And Investige				
and and -			(bullet)	
News .		*	11 ANT	
			A ANTIMAN	
		•	· Assistent and	
Advenue ba			in Arrest	
1 - I star market			= A-then	
	181		101	
Arthury .			a Avera	
Antony			10 A 1989	
Agrigant Agrigant			AT NT	
	oran () bottle () Austi () Officera		- Annothing and	
Detroitemether			E Advertise	
		•	a diverse.	

Data import and export

Data access from anywhere

Web-based application

- You can get started immediately after receiving the login details. Your gateway (COM465, CP9xx) sends the measured values to our data centre in encrypted form.
- You will receive automatic updates (security and features).
- We take care of the backups.

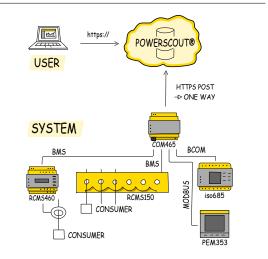

BENDER					1	0
4 6000	Virtuelle Messpunkt	æ				
	WHORE HEEPONES +Hore	uliper				
	1 km 20 ups 270			e - 54	belivon 14 -	-
	Name	Beschreibung	formet	Eicheit		
	(*****					
	12	description	100°2/8	Ranzan	1	8
	10		200*0/0	*	1	
	Last in de Waschonlags		100°a/b		1	8
	Fair 1		100°0/0			1
	Fair2		100°#/8	-		8
	der1		100°#/8			

Calculation of key figures

POWERSCOUT[®] collects data and information across locations. This data can be compiled for fault analysis or calculation of key figures.

- Calculation of data points/measuring points
- · Display of virtual measuring points on the dashboard
- · Individual naming of virtual measuring points

Bender support

POWERSCOUT[®] continuously collects measurements and generates user-specific reports. This well-founded database allows representing real trend curves and finding the causes of malfunctions.

Bender supports you in setting up your system. Please do not hesitate to contact us.



POWERSCOUT[®] widgets – Configuration options

Widgets are graphical components that allow individual adjustment of the content displayed in POWERSCOUT[®]. The widgets can be displayed in individual sizes and positions on a dashboard.


A dashboard can show a time period. The widgets displayed on the dashboard can differ from the set dashboard time and show individual time periods.

Graph

🛃 BENDER __

- Linear and logarithmic representation

 Insulation values can be displayed more clearly
- Scrolling and zooming with the mouse wheel is possible
- Display of events
- Minimum and maximum of the Y axis adjustable
- Two Y axes
- Line colour selection
- Adjustable line width
- · Guides can be displayed

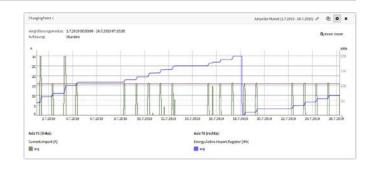

(regelepted at the							446adlan (497)3.1.2016-17.8.2016 🖋 🏼 🛛
Q Salve							
nzahl der Ensignisse	Enelgois	Nesquiktrane	tor.	States	System	Selection	(e)R
	Differentiation	field 3 37Q2 Altigang str 2	Second	degra.	Granterg	10 C	Where λ field as A^{α} is the field (RC) in Late () ()(
	piteersteam	Feld \$1702 Aligang UV 2	Tenang	Ente	Gränberg	1.5	1034V 1.Feid 12.47 A 1.6-0.09 (RCHL 495.0) (8)
	Differencesion	Feld 3 10Q2-Aligang VV 3	Veranet	Inpre	Granters	1 ()	1004Y 1744 2247 A 16430 (RDHL460) (6
	Differenceson	Auto 5 10(3) Alegang UV 3	Tenang	Kinda .	and the second		10HV 1 Feat 12 47 A 1 5 5 50 (RCH1 465 0) (6)

Event statistics

- Documentation of events
- State display of channels
- · Start and end of events
- Tabular view
- Targeted search for events

- Documentation of events
- State display of channels
- Start and end of events
- Tabular view
- Targeted search for events

Q Suchan					
bis 30 uon 543					$\kappa \ < \ {\rm SeltriumSh} \ >$
wtum *	Ereignis	Тур	Status	Mexanet	Nesquilitiane
6322029145513	Differentations	Harning	Beginn	96 mA	5.02.312017-04.02.3 Wandler T04 Net224/eitung
6.32.3029-04.55.13	Differentiations	Marning	Beginn	963 mA	102.312017 0V02.3 Wandler T113 Unterflavortollarg 1-3 / F113
1.32.2029-04.55/26	Differenzations	Harning	Ende		F-02-312EUT-0V-02-3 Wandler T04 Netzzaleitung
132,2029-04.55:26	Differentiations	Harning	Ende		n 02.312617-0V02.3 Wandler T113 Untorflurvertollang 3-3/F113
132,203914,5541	Differencebrons	Harning	beginn	315 mA	F-02.312017-0V-02.3 Wandler T04 Net22x1eRcng
32,302914:53:51	Differenzatrom	Warning	Ende		1.02.312ELT-UV-02.3 Wandler T04 Netzyaleitung
1.12.2029-04.55.59	Differencebrons	Marning	beginn	Arr DH	F 02.312EUT 4V 02.3 Wandler T04 Netzzaleitung
32,202914.55.59	Differenziatrom	Warning	Degrin	654 mA	F-02.312817-09-02.3 Wandler T113 Unterflatverfeilung 1-3 / F113
1323029145615	Differencebrons	Harning	Ende		F-02.312ECT-0V-02.3 Wandler T04 Netzzaleitung
32,201914,56:85	Differenzetrom	Harning	Ende		1.62.512E17-09.62.5 Wandler T113 Unterflurverfeilung 1-5 / F113
bis 3d upon 543					< < Setteluce50 >

Atics	ළු	•
Messpunktname	Beschreibung	Statu
ZS.31.11.001_UNV002_ATICs_Ausfall Leitung 1 ZS	Ereignisse	 Image: A start of the start of
ZS.31.11.001_UNV002_ATICs_Ausfall Leitung 2 S1	Ausfall Leitung SV	0
ZS.31.11.001_UNV002_ATICs_Isolationsfehler	Ereignisse	 Image: A start of the start of
ZS.31.11.001_UNV002_ATICs_Trafo-Überlast	Ereignisse	 Image: A start of the start of
ZS.31.11.001_UNV002_ATICs_Trafo-Übertemperatur	Ereignisse	 Image: A start of the start of
ZS.31.11.001_UNV002_ATICs_Überstrom	Ereignisse	 Image: A start of the start of
ZS.31.11.001_UNV002_ATICs_Test/Service	Ereignisse	~
ZS.31.11.001_UNV002_ATICs_Umschalteinrichtung im Handbetrieb	Automatikbetrieb	~
ZS.31.11.001_UNV002_ATICs_Alarm	Automatikbetrieb	~


Alarm state


- Display of alarm states
- Fault detection at a glance
- Monitoring of the service state of your system
- · Easy detection of residual currents across system parts

POWERSCOUT® widgets – Configuration options

Gauge

- Lower and upper limit values flexibly adjustable
- Monitoring of measured values

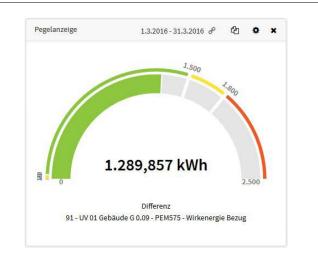

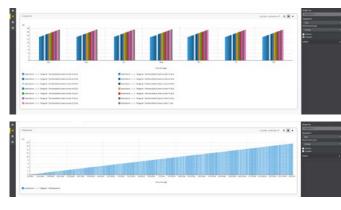

Bar graph

- Display of cumulative meter values in a bar graph
- Grouping of data in ascending order
- Aggregation by days, weeks, months, quarters and years
- Guides can be displayed

Table view


- Display of measured values in a table
- Minimum, maximum and average values can be displayed
- Complete overview of minimum, maximum and average values of several measured values


Tabellenansicht		Aktuelles Jahr (1.1.	2016 - 17.8.2016) 🖉 🌣 🗙
Messpunktname	Durchschnitt	Minimum	Maximum
Grünberg-1-126-Frequenz	50 Hz	0 Hz	50,107 Hz
Grünberg-1-126-I(1)	36,899 A	81,438 mA	199,807 A
Grünberg-1-126-I(2)	59,96 A	98,143 mA	335,544 A
Grünberg-1-126-I(3)	59,086 A	0A	314,869 A
Grünberg-1-126-I(N)	66,668 mA	28,766 mA	164,241 mA
Grünberg-1-126-P (1)	8,158 kW	-6,792 kW	43,502 kW
Grünberg-1-126-P (2)	11,232 kW	-14,956 kW	72,787 kw
Grünberg-1-126-P (3)	11,627 kW	-14,065 kW	68,871 kW
Grünberg-1-126-U(1-N)	228,419 V	220,636 V	234,952 V
5rünberg-1-126-U(2-N)	228,665 V	220,833 V	236,297 V
Grünberg-1-126-U(3-N)	228,685 V	221,342 V	236,053 V

BENDER ______ POWERSCOUT® widgets – Configuration options

Text editor

- Description of dashboards
- Adding custom images

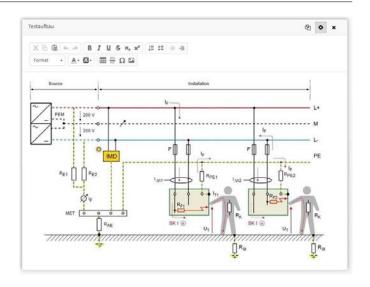

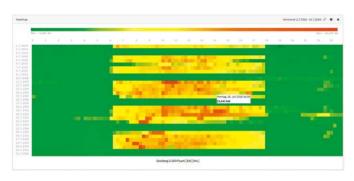



Heat map

- Display particularly striking values in an easily recognisable way
- Colour inversion to allow insulation faults to be displayed as well
- Adjustable limit values

Sankey diagram

- Graphic representation of quantity flows
- Preferably used for energy monitoring
- System view freely configurable

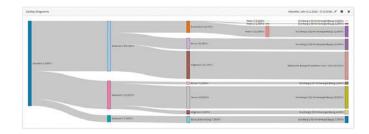

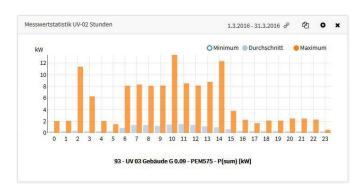



Measurement statistics

- Display of a measured value as statistics
- Minimum, maximum and average values can be displayed
- Colour differentiation individually adjustable
- Guides can be displayed

The Bender world in a nutshell

Bender system world

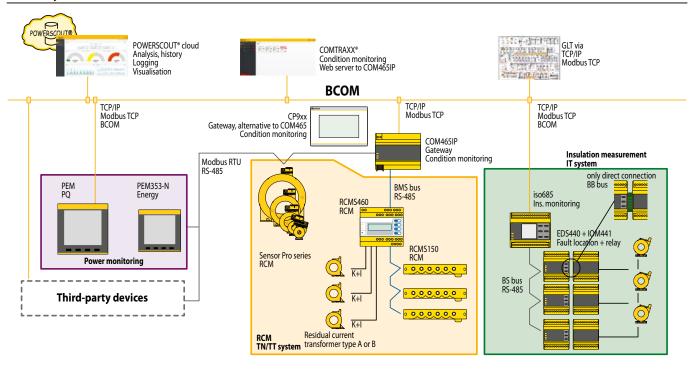

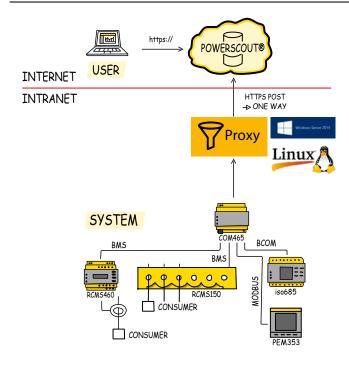



Bender GmbH & Co. KG

Londorfer Straße 65 35305 Grünberg Germany

Tel.: +49 6401 807-0 info@bender.de www.bender.de

Considerably less effort:

- The initial and ongoing project costs caused by in-house IT infrastructure are often overlooked
- No updates at the customer's site or by the customer
- No maintenance by the customer necessary
- · No database maintenance by the customer necessary
- Hardware costs, memory expansions are not relevant
- · Updates and new features are incorporated on the fly
- · Access from any location without VPN etc.
- · One-way data flow
- On request, communication via proxy server (simple installation)
- Data protection in professional data centres is better than in some companies
- Data backup constantly guaranteed, redundancy
- · Hosted by a German company, server in Frankfurt



© Bender GmbH & Co. KG, Germany Subject to change! The specified standards take into account the edition valid until 04.2024 unless otherwise indicated.